PCB PIEZOTRONICS

Service, Repair, and Return Policies and Instructions

The information contained in this document supersedes all similar information that may be found elsewhere in this manual.

Service - Due to the sophisticated nature of the sensors and associated instrumentation provided by PCB Piezotronics, user servicing or repair is not recommended and, if attempted, may void the factory warranty. Routine maintenance, such as the cleaning of electrical connectors, housings, and mounting surfaces with solutions and techniques that will not harm the physical material of construction, is acceptable. Caution should be observed to ensure that liquids are not permitted to migrate into devices that are not hermetically sealed. Such devices should only be wiped with a dampened cloth and never submerged or have liquids poured upon them.

Repair – In the event that equipment becomes damaged or ceases to operate, arrangements should be made to return the equipment to PCB Piezotronics for repair. User servicing or repair is not recommended and, if attempted, may void the factory warranty.

Calibration – Routine calibration of sensors and associated instrumentation is recommended as this helps build confidence in measurement accuracy and acquired data. Equipment calibration cycles typically are established by the users own quality regimen. When in doubt about a calibration cycle, a good "rule of thumb" is to recalibrate on an annual basis. It is

also good practice to recalibrate after exposure to any severe temperature extreme, shock, load, or other environmental influence, or prior to any critical test.

PCB Piezotronics maintains an ISO-9001 certified metrology laboratory and offers calibration services, which are accredited by A2LA to ISO/IEC 17025, with full traceability to SI through N.I.S.T. In addition to the normally supplied calibration, special testing is also available, such as: sensitivity at elevated or cryogenic temperatures, phase response, extended high or low frequency response, extended range, testing, hydrostatic leak pressure testing, and others. For information on standard recalibration services or special testing, contact your local PCB Piezotronics distributor. sales or factory representative. customer service representative.

Returning **Equipment** – Following these procedures will ensure that your returned materials are handled in the expedient Before most manner. returnina any equipment to PCB Piezotronics, contact your local distributor, sales representative, or factory customer service representative to obtain a Return Warranty, Service, Repair, and Return Policies and Instructions Materials Authorization (RMA) Number. This RMA number should be clearly marked on the outside of all package(s) and on the packing

list(s) accompanying the shipment. A detailed account of the nature of the problem(s) being experienced with the equipment should also be included inside the package(s) containing any returned materials.

A Purchase Order, included with the returned materials, will expedite the turn-around of serviced equipment. It is recommended to include authorization on the Purchase Order for PCB to proceed with any repairs, as long as they do not exceed 50% of the replacement cost of the returned item(s). PCB will provide a price quotation or replacement recommendation for any item whose repair costs would exceed 50% of replacement cost, or any item that is not economically feasible to repair. For routine calibration services. the Order Purchase should include authorization to proceed and return at current pricing, which can be obtained a factory customer from service representative.

Contact Information – International customers should direct all inquiries to their local distributor or sales office. A

complete list of distributors and offices found at www.pcb.com. can be Customers within the United States may contact their local sales representative or factory customer service а representative. A complete list of sales representatives can be found at www.pcb.com. Toll-free telephone numbers for a factory customer service representative. in the division responsible for this product, can be found on the title page at the front of this manual. Our ship to address and general contact numbers are:

PCB Piezotronics, Inc. 3425 Walden Ave. Depew, NY14043 USA Toll-free: (800) 828-8840 24-hour SensorLineSM: (716) 684-0001 Website: www.pcb.com E-mail: info@pcb.com



PCB工业监视和测量设备 - 中国RoHS2公布表 PCB Industrial Monitoring and Measuring Equipment - China RoHS 2 Disclosure Table

	有害物 质						
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴 联苯 (PBB)	多溴二苯醚 (PBDE)	
住房	0	0	0	0	0	0	
PCB板	Х	0	0	0	0	0	
电气连接器	0	0	0	0	0	0	
压电晶体	Х	0	0	0	0	0	
环氧	0	0	0	0	0	0	
铁氟龙	0	0	0	0	0	0	
电子	0	0	0	0	0	0	
厚膜基板	0	0	Х	0	0	0	
电线	0	0	0	0	0	0	
电缆	Х	0	0	0	0	0	
塑料	0	0	0	0	0	0	
焊接	Х	0	0	0	0	0	
铜合金 /黄 铜	Х	0	0	0	0	0	
本表格依据 SJ/T 11364 的规定编制。							
O:表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。							
X:表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。							
铅是欧洲RoHS指令2011/65/ EU附件三和附件四目前由于允许的豁免。							

CHINA RoHS COMPLIANCE

Component Name	Hazardous Substances							
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Chromium VI Compounds (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)		
Housing	0	0	0	0	0	0		
PCB Board	Х	0	0	0	0	0		
Electrical Connectors	0	0	0	0	0	0		
Piezoelectric Crystals	Х	0	0	0	0	0		
Ероху	0	0	0	0	0	0		
Teflon	0	0	0	0	0	0		
Electronics	0	0	0	0	0	0		
Thick Film Substrate	0	0	Х	0	0	0		
Wires	0	0	0	0	0	0		
Cables	Х	0	0	0	0	0		
Plastic	0	0	0	0	0	0		
Solder	Х	0	0	0	0	0		
Copper Alloy/Brass	Х	0	0	0	0	0		

This table is prepared in accordance with the provisions of SJ/T 11364.

O: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.

X: Indicates that said hazardous substance contained in at least one of the homogeneous materials for this part is above the limit requirement of GB/T 26572.

 
Lead is present due to allowed exemption in Annex III or Annex IV of the European RoHS Directive 2011/65/EU.

DOCUMENT NUMBER: 21354 DOCUMENT REVISION: **D** ECN: 46162

INSTALLATION INSTRUCTIONS


●PCB PIEZOTRONICS[™]

Model 076B04 5-44 Connector Kit



5-44 Connector Assembly Procedure for 002 Cable

- 1) Slide the strain relief, tapered end first, onto the cable.
- 2) Slide the outer crimp tube, large end first, onto the cable.
- 3) Cable layers are identified in Figure 1a. Strip cable layers to the lengths indicated in Figure 1b.
- 4) Pull back the shield over cable jacket.
- 5) Trim the center conductor so that the pin bottoms out to the back of the insulation. Apply solder to center conductor. Use of flux is recommended.

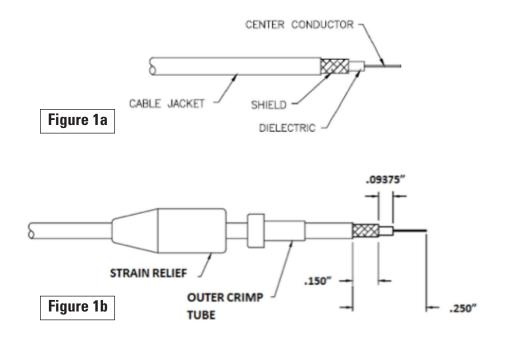

PCB Piezotronics, Inc. claims proprietary rights in the information disclosed hereon. This information is furnished in confidence on the express understanding that neither it nor any reproduction thereof will be disclosed to others or used for any purpose not expressly agreed upon by PCB Piezotronics, Inc.


60503 ECO: 43599 REV: NR

PCB PIEZOTRONICS, INC. • WWW.PCB.COM


INSTALLATION INSTRUCTIONS

◎PCB PIEZOTRONICS[™]

6) The supplied pin has an inspection hole. Apply flux into the inspection hole. Add a small amount of solder onto a soldering iron. Solder the pin to the conductor through the inspection hole. The inspection hole can also be used to see the solder connection between the conductor and pin. Make sure that solder has not flowed inside the socket of the pin. **See Figure 2.**

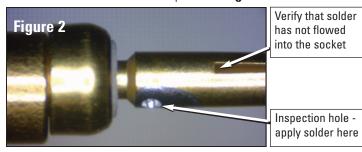

7) Comb the shield over the rear end of the pin. See Figure 3.

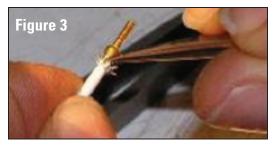

8) Pull up/slide the outer crimp tube over the pin and shield. **See Figure 4.**





3425 Walden Avenue, Depew, NY 14043-2495 USA PCB® toll-free 800-828-8840 24-hour SensorLine^{s™} 716-684-0001 FAX 716-684-0987 E-mail info@pcb.com Website www.pcb.com

ISO 9001 CERTIFIED

© 2014 PCB Group, Inc. In the interest of constant product improvement, specifications are subject to change without notice. SensorLine is a service mark of PCB Group, Inc. PCB is a registered trademark of PCB Group, Inc. All other trademarks are properties of their respective owners. PCB-076B04-1214 Printed in U.S.A.


9) Slide the front insulator onto the pin. See Figure 5.

Figure 5		
	Total	

10) Slide the coupling nut/shell assembly over the pin and outer crimp tube. **See Figure 6.**



11) Crimp using the crimp tool provided. See Figures 7a and 7b.

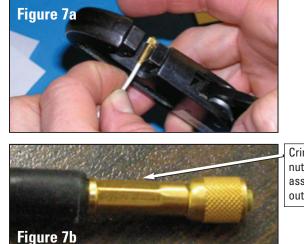

Crimped coupling nut/shell assembly over outer crimp tube

12) Slide up strain relief until it locks in place. See Figure 8.



Manual number: 60503 Manual revision: NR ECN: