

Model 691B40

Switch Box Module

Installation and Operating Manual

For assistance with the operation of this product, contact PCB Piezotronics, Inc.

Toll-free: 800-959-4464 24-hour SensorLine: 716-684-0001 Fax: 716-684-3823 E-mail: imi@pcb.com Web: www.imi-sensors.com







Repair and Maintenance

PCB guarantees Total Customer Satisfaction through its "Lifetime Warranty Plus" on all Platinum Stock Products sold by PCB and through its limited warranties on all other PCB Stock, Standard and Special products. Due to the sophisticated nature of our sensors and associated instrumentation, field servicing and repair is not recommended and, if attempted, will void the factory warranty.

Beyond routine calibration and battery replacements where applicable, our products require no user maintenance. Clean electrical connectors, housings, and mounting surfaces with solutions and techniques that will not harm the material of construction. Observe caution when using liquids near devices that are not hermetically sealed. Such devices should only be wiped with a dampened cloth—never saturated or submerged.

In the event that equipment becomes damaged or ceases to operate, our Application Engineers are here to support your troubleshooting efforts 24 hours a day, 7 days a week. Call or email with model and serial number as well as a brief description of the problem.

Calibration

Routine calibration of sensors and associated instrumentation is necessary to maintain measurement accuracy. We recommend calibrating on an annual basis, after exposure to any extreme environmental influence, or prior to any critical test.

PCB Piezotronics is an ISO-9001 certified company whose calibration services are accredited by A2LA to ISO/IEC 17025, with full traceability to SI through N.I.S.T. In addition to our standard calibration services, we also offer specialized tests, including: sensitivity at elevated or cryogenic temperatures, phase response, extended high or low frequency response, extended range, leak testing, hydrostatic pressure testing, and others. For more information, contact your local PCB Piezotronics distributor, sales representative, or factory customer service representative.

Returning Equipment

If factory repair is required, our representatives will provide you with a Return Material Authorization (RMA) number, which we use to reference any information you have already provided and expedite the repair process. This number should be clearly marked on the outside of all returned package(s) and on any packing list(s) accompanying the shipment.

Contact Information

PCB Piezotronics, Inc. 3425 Walden Ave. Depew, NY14043 USA Toll-free: (800) 828-8840 24-hour SensorLine: (716) 684-0001 General inquiries: <u>info@pcb.com</u> Repair inquiries: <u>rma@pcb.com</u>

For a complete list of distributors, global offices and sales representatives, visit our website, <u>www.pcb.com</u>.

Safety Considerations

This product is intended for use by qualified personnel who recognize shock hazards and are familiar with the precautions required to avoid injury. While our equipment is designed with user safety in mind, the protection provided by the equipment may be impaired if equipment is used in a manner not specified by this manual.

Discontinue use and contact our 24-Hour Sensorline if:

- Assistance is needed to safely operate equipment
- Damage is visible or suspected
- Equipment fails or malfunctions

For complete equipment ratings, refer to the enclosed specification sheet for your product.

Definition of Terms and Symbols

The following symbols may be used in this manual:



DANGER

Indicates an immediate hazardous situation, which, if not avoided, may result in death or serious injury.



CAUTION

Refers to hazards that could damage the instrument.



NOTE

Indicates tips, recommendations and important information. The notes simplify processes and contain additional information on particular operating steps.

The following symbols may be found on the equipment described in this manual:



This symbol on the unit indicates that high voltage may be present. Use standard safety precautions to avoid personal contact with this voltage.



This symbol on the unit indicates that the user should refer to the operating instructions located in the manual.



This symbol indicates safety, earth ground.



PCB工业监视和测量设备 - 中国RoHS2公布表 PCB Industrial Monitoring and Measuring Equipment - China RoHS 2 Disclosure Table

| | | 有害物 质 | | | | | |
|-----------------|--------------------|--------------|-----------|------------------------|------------------------|----------------------|--|
| 部件名称 | 铅 (Pb) | 汞 (Hg) | 镉 (Cd) | 六价铬 (Cr(VI)) | 多溴 联苯 (PBB) | 多溴二苯 醚 (PBDE) | |
| 住房 | 0 | 0 | 0 | 0 | 0 | 0 | |
| PCB板 | Х | 0 | 0 | 0 | 0 | 0 | |
| 电气连接 器 | 0 | 0 | 0 | 0 | 0 | 0 | |
| 压电晶 体 | х | 0 | 0 | 0 | 0 | 0 | |
| 环氧 | 0 | 0 | 0 | 0 | 0 | 0 | |
| 铁氟龙 | 0 | 0 | 0 | 0 | 0 | 0 | |
| 电子 | 0 | 0 | 0 | 0 | 0 | 0 | |
| 厚膜基板 | 0 | 0 | Х | 0 | 0 | 0 | |
| 电线 | 0 | 0 | 0 | 0 | 0 | 0 | |
| 电缆 | Х | 0 | 0 | 0 | 0 | 0 | |
| 塑料 | 0 | 0 | 0 | 0 | 0 | 0 | |
| 焊接 | Х | 0 | 0 | 0 | 0 | 0 | |
| 铜合金 /黄 铜 | Х | 0 | 0 | 0 | 0 | 0 | |
| 本表格依据 SJ/T 1 | L 1364 的 规定 | E编制。 | | | | | |
| 0:表示该有害物 | 勿质在该部件 | 所有均同 | 気材料中 | 的含量均在 GB/T 26 | 572 规定的限量要求以 | 下。 | |
| | | | | 材料中的含量超出(3目前由于允许的豁 | 6B/T 26572 规定的限量 免。 | 要求。 | |

CHINA ROHS COMPLIANCE

| Component Name | Hazardous Substances | | | | | | | |
|------------------------|----------------------|--------------|--------------|--------------------------------------|-----------------------------------|---|--|--|
| | Lead (Pb) | Mercury (Hg) | Cadmium (Cd) | Chromium VI Compounds (Cr(VI)) | Polybrominated Biphenyls (PBB) | Polybrominated Diphenyl Ethers (PBDE) | | |
| Housing | 0 | 0 | 0 | 0 | 0 | 0 | | |
| PCB Board | Х | 0 | 0 | 0 | 0 | 0 | | |
| Electrical Connectors | 0 | 0 | 0 | 0 | 0 | 0 | | |
| Piezoelectric Crystals | Х | 0 | 0 | 0 | 0 | 0 | | |
| Ероху | 0 | 0 | 0 | 0 | 0 | 0 | | |
| Teflon | 0 | 0 | 0 | 0 | 0 | 0 | | |
| Electronics | 0 | 0 | 0 | 0 | 0 | 0 | | |
| Thick Film Substrate | 0 | 0 | Х | 0 | 0 | 0 | | |
| Wires | 0 | 0 | 0 | 0 | 0 | 0 | | |
| Cables | Х | 0 | 0 | 0 | 0 | 0 | | |
| Plastic | 0 | 0 | 0 | 0 | 0 | 0 | | |
| Solder | Х | 0 | 0 | 0 | 0 | 0 | | |
| Copper Alloy/Brass | Х | 0 | 0 | 0 | 0 | 0 | | |

This table is prepared in accordance with the provisions of SJ/T 11364.


O: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.

X: Indicates that said hazardous substance contained in at least one of the homogeneous materials for this part is above the limit requirement of GB/T 26572.

Lead is present due to allowed exemption in Annex III or Annex IV of the European RoHS Directive 2011/65/EU.



The Model 691B40 Twelve Channel Switch Box Module

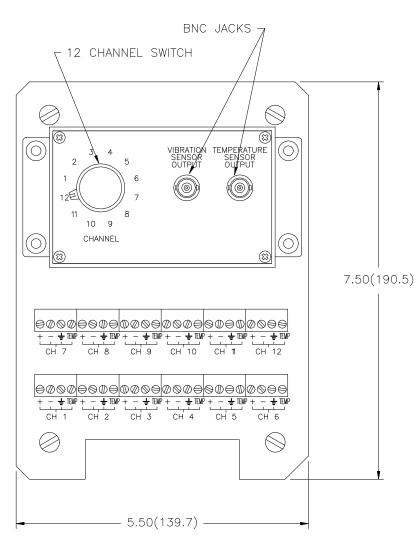

Operating Guide with Enclosed Warranty Information

3425 Walden Avenue, Depew, New York 14043-2495

Phone (716) 684-0003

Fax (716) 684-3823

Toll Free Line 1-800-959-4IMI



INDUSTRIAL MONITORING INSTRUMENTATION DIVISION

table of contents

| Description | page 3 |
|-------------------------|--------|
| Installation | page 3 |
| Calibration | page 3 |
| Terminal Strip Wiring | page 4 |
| ESD Warning Information | page 5 |

warranty/servicing

| Warranty, Service & Return Procedure | page | 6 |
|--------------------------------------|------|---|
| Customer Service | page | 7 |



description

The Model 691B40 is a twelve channel switch box module which provides terminal strip input with the convenience of BNC outputs. They are used in conjunction with commercially available data collectors and analyzers. They provide inputs and switched outputs for vibration sensors with built-in temperature sensors. This field installable module may be added to the model 691B43, 691B44, or 691B45 to provide expandability for up to 48 channels. A few specifications are listed below for easy reference:

| Number of Channels | |
|--------------------------------|-------------------------|
| Input Connectors | 4-Socket Terminal Strip |
| Output Connector - Vibration | BNC Jack |
| Output Connector - Temperature | BNC Jack |
| Size (H x W x D) | 7.5 x 5.5 x 3.3 in |
| Weight | 1.7 lb. |

installation

The 691B40 module may be added to the 691B43, 691B44, or 691B45 by fastening the captive panel screws found in each corner of the 691B40 module to the plate found in the bottom of 691B43, 691B44, or 691B45 enclosure.

calibration

The Model 691B40 does not need any calibration since they are only switch box modules. If there are any questions concerning the products, please contact the factory.



INDUSTRIAL MONITORING INSTRUMENTATION DIVISION



warning 1 – ESD sensitivity

The power supply/signal conditioner should not be opened by anyone other than qualified service

personnel. This product is intended for use by qualified personnel who recognize shock hazards and are familiar with the safety precautions required to avoid injury.

warning 2 – ESD sensitivity

This equipment is designed with user safety in mind; however, the protection provided by the equipment may be impaired if the equipment is used in a manner not specified by PCB Piezotronics, Inc.

caution 1 – ESD sensitivity

Cables can kill your equipment. High voltage electrostatic discharge (ESD) can damage electrical devices. Similar to a capacitor, a cable can hold a charge caused by triboelectric transfer, such as that which occurs in the following:

- Laying on and moving across a rug,
- Any movement through air,
- The action of rolling out a cable, and/or
- Contact with a non-grounded person.

The PCB solution for product safety:

- Connect the cables only with the AC power off.
- Temporarily "short" the end of the cable before attaching it to any signal input or output.

caution 2 – ESD sensitivity

ESD considerations should be made prior to performing any internal adjustments on the equipment. Any piece of electronic equipment is vulnerable to ESD when opened for adjustments. Internal adjustments should therefore be done ONLY at an ESD-safe work area. Many products have ESD protection, but the level of protection may be exceeded by extremely high voltage.

ELECTROSTATIC

DISCHARGE SENSITIVE



warranty

IMI instrumentation is warranted against defective material and workmanship for 1 year unless otherwise expressly specified. Damage to instruments caused by incorrect power or misapplication, is not covered by warranty. *If there are any questions regarding power, intended application, or general usage, please consult with your local sales contact or distributor.* Batteries and other expendable hardware items are not covered by warranty.

service

Because of the sophisticated nature of IMI instrumentation, field repair is typically **NOT** recommended and may void any warranty. If factory service is required, return the instrumentation according to the "Return Procedure" stated below. *A repair and/or replacement quotation will be provided prior to servicing at no charge.* Before returning the unit, please consult a factory IMI applications engineer concerning the situation as certain problems can often be corrected with simple on-site procedures.

return procedure

To expedite returned instrumentation, contact a factory IMI applications engineer for a RETURN MATERIAL AUTHORIZATION (RMA) NUMBER. Please have information available such as model and serial number. Also, to insure efficient service, provide a written description of the symptoms and problems with the equipment to a local sales representative or distributor, or contact IMI if none are located in your area.

Customers outside the U.S. should consult their local IMI distributor for information on returning equipment. For exceptions, please contact the International Sales department at IMI to request shipping instructions and an RMA. For assistance, please call (716) 684-0003, or fax us at (716) 684-3823. You may also receive assistance via e-mail at **imi@pcb.com** or visit our web site at **www.pcb.com**.



INDUSTRIAL MONITORING INSTRUMENTATION DIVISION

customer service

IMI, a division of PCB Piezotronics, guarantees **Total Customer Satisfaction**. If, at any time, for any reason, you are not completely satisfied with any IMI product, IMI will repair, replace, or exchange it at no charge. You may also choose, within the warranty period, to have your purchase price refunded.

IMI offers to all customers, at no charge, 24-hour phone support. This service makes product or application support available to our customers, day or night, seven days a week. When unforeseen problems or emergency situations arise, call the **IMI Hot Line at (716) 684-0003**, and an application specialist will assist you.



3425 Walden Avenue, Depew, NY 14043-2495 Phone: (716) 684-0003 • USA Fax: (716) 684-3823 • INTL Fax: (716) 684-4703

ICP ® is a registered trademark of PCB Piezotronics, Incorporated, which uniquely identifies PCB sensors that incorporate built-in microelectronics.

| Model Number 691B40 | SWITCH BOX MODULE | | | | | | Revision: B ECN #: 43192 | |
|--|--|------------|-----------------|-----------------|---|-----------------|-----------------------------|--|
| Performance Channels Physical Electrical Connector(Output, Vibration) Electrical Connector(Output, Temperature) Electrical Connector(Input) Size (Height x Width x Depth) Weight All specifications are at room temperature unle | OPTIONAL VERSIONS Optional versions have identical specifications and accessories as listed model except where noted below. More than one option may b | | | | | | | |
| In the interest of constant product improvement, we reserve the right to change specifications without notice. ICP [®] is a registered trademark of PCB Group, Inc. | | | Entered: AP | Engineer: gs | Sales: MPN | Approved: BAM | Spec Number: | |
| | | | Date: 7/30/2014 | Date: 7/30/2014 | Date: 7/30/2014 | Date: 7/30/2014 | 12428 | |
| | | A PCB PIEZ | COTRONICS DIV. | | Phone: 800-95 Fax: 716-684-3 E-Mail: imi@pc | 823 | | |

