



Model A-30774A

**Passive speed sensor kit, 200 to 20k Hz, incl. mating connector and cable
Installation and Operating Manual**

**For assistance with the operation of this product,
contact PCB Piezotronics, Inc.**

**Toll-free: 800-828-8840
24-hour SensorLine: 716-684-0001
Fax: 716-684-0987
E-mail: info@pcb.com
Web: www.pcb.com**



Repair and Maintenance

PCB guarantees Total Customer Satisfaction through its “Lifetime Warranty Plus” on all Platinum Stock Products sold by PCB and through its limited warranties on all other PCB Stock, Standard and Special products. Due to the sophisticated nature of our sensors and associated instrumentation, **field servicing and repair is not recommended and, if attempted, will void the factory warranty.**

Beyond routine calibration and battery replacements where applicable, our products require no user maintenance. Clean electrical connectors, housings, and mounting surfaces with solutions and techniques that will not harm the material of construction. Observe caution when using liquids near devices that are not hermetically sealed. Such devices should only be wiped with a dampened cloth—never saturated or submerged.

In the event that equipment becomes damaged or ceases to operate, our Application Engineers are here to support your troubleshooting efforts 24 hours a day, 7 days a week. Call or email with model and serial number as well as a brief description of the problem.

Calibration

Routine calibration of sensors and associated instrumentation is necessary to maintain measurement accuracy. We recommend calibrating on an annual basis, after exposure to any extreme environmental influence, or prior to any critical test.

PCB Piezotronics is an ISO-9001 certified company whose calibration services are accredited by A2LA to ISO/IEC 17025, with full traceability to SI through N.I.S.T. In addition to our standard calibration services, we also offer specialized tests, including: sensitivity at elevated or cryogenic temperatures, phase response, extended high or low frequency response, extended range, leak testing, hydrostatic pressure testing, and others. For more information, contact your local PCB Piezotronics distributor, sales representative, or factory customer service representative.

Returning Equipment

If factory repair is required, our representatives will provide you with a Return Material Authorization (RMA) number, which we use to reference any information you have already provided and expedite the repair process. This number should be clearly marked on the outside of all returned package(s) and on any packing list(s) accompanying the shipment.

Contact Information

PCB Piezotronics, Inc.
3425 Walden Ave.
Depew, NY14043 USA
Toll-free: (800) 828-8840
24-hour SensorLine: (716) 684-0001
General inquiries: info@pcb.com
Repair inquiries: rma@pcb.com

For a complete list of distributors, global offices and sales representatives, visit our website, www.pcb.com.

Safety Considerations

This product is intended for use by qualified personnel who recognize shock hazards and are familiar with the precautions required to avoid injury. While our equipment is designed with user safety in mind, the protection provided by the equipment may be impaired if equipment is used in a manner not specified by this manual.

Discontinue use and contact our 24-Hour Sensorline if:

- Assistance is needed to safely operate equipment
- Damage is visible or suspected
- Equipment fails or malfunctions

For complete equipment ratings, refer to the enclosed specification sheet for your product.

Definition of Terms and Symbols

The following symbols may be used in this manual:



DANGER

Indicates an immediate hazardous situation, which, if not avoided, may result in death or serious injury.

**CAUTION**

Refers to hazards that could damage the instrument.

**NOTE**

Indicates tips, recommendations and important information. The notes simplify processes and contain additional information on particular operating steps.

The following symbols may be found on the equipment described in this manual:



This symbol on the unit indicates that high voltage may be present. Use standard safety precautions to avoid personal contact with this voltage.



This symbol on the unit indicates that the user should refer to the operating instructions located in the manual.



This symbol indicates safety, earth ground.



PCB工业监视和测量设备 - 中国RoHS2公布表

PCB Industrial Monitoring and Measuring Equipment - China RoHS 2 Disclosure Table

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
住房	0	0	0	0	0	0
PCB板	X	0	0	0	0	0
电气连接器	0	0	0	0	0	0
压电晶体	X	0	0	0	0	0
环氧	0	0	0	0	0	0
铁氟龙	0	0	0	0	0	0
电子	0	0	0	0	0	0
厚膜基板	0	0	X	0	0	0
电线	0	0	0	0	0	0
电缆	X	0	0	0	0	0
塑料	0	0	0	0	0	0
焊接	X	0	0	0	0	0
铜合金/黄铜	X	0	0	0	0	0
本表格依据 SJ/T 11364 的规定编制。						
0：表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。						
X：表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。						
铅是欧洲RoHS指令2011/65/ EU附件三和附件四目前由于允许的豁免。						

CHINA RoHS COMPLIANCE

Component Name	Hazardous Substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Chromium VI Compounds (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Housing	O	O	O	O	O	O
PCB Board	X	O	O	O	O	O
Electrical Connectors	O	O	O	O	O	O
Piezoelectric Crystals	X	O	O	O	O	O
Epoxy	O	O	O	O	O	O
Teflon	O	O	O	O	O	O
Electronics	O	O	O	O	O	O
Thick Film Substrate	O	O	X	O	O	O
Wires	O	O	O	O	O	O
Cables	X	O	O	O	O	O
Plastic	O	O	O	O	O	O
Solder	X	O	O	O	O	O
Copper Alloy/Brass	X	O	O	O	O	O

This table is prepared in accordance with the provisions of SJ/T 11364.

O: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.


X: Indicates that said hazardous substance contained in at least one of the homogeneous materials for this part is above the limit requirement of GB/T 26572.

Lead is present due to allowed exemption in Annex III or Annex IV of the European RoHS Directive 2011/65/EU.

SPECIFICATIONS

**PCB DWG. # 20986
 REV. NR**

**MODEL A-30774A
 PASSIVE SPEED SENSOR KIT**

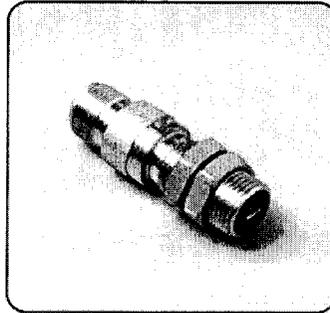

- Sensor Type High Resolution Variable Reluctance Sensor (VRS)
- Output Voltage..... 10 to 170 V P-P
- Coil Resistance..... 910 to 1200 OHMS
- Inductance 450 mH max.
- Minimum Surface Speed (Typ.) 10 IPS
- Operating Frequency Range 200 to 20k Hz
- Pin Out A - Signal Output
 B - Signal Common
- Operating Temperature Range..... -67 to 250°F
 (-55 to 120°C)
- Thread 5/8-18 UNF-2A
- Mating Connector MS3106A-10SL-4S
- Cable Clamp..... MS3057-4A
- Vibration Meets Mil-Std 202F Method 204D
- Sensor Tightening 15 ft-lbs torque
- Weight..... 2.5 oz. (70 g.)


PCB Piezotronics, Inc.
 Force/Torque Division
 3425 Walden Avenue, Depew, New York 14043-2495
 Phone: 716-684-0001 Fax: 716-684-8877
 Toll free: 888-684-0004
 Email: force@pcb.com
 Web: www.pcb.com
ISO CERTIFIED

23872

PCB Piezotronics Inc. claims proprietary rights in the information disclosed hereon. Neither it nor any reproduction thereof will be disclosed to others without written consent of PCB Piezotronics Inc.

APPLICATION		
NEXT ASS'Y	USED ON	VAR

REVISIONS				
REV	DESCRIPTION	ECN	DATE	APP'D
A	ADD INSTALLATION INSTRUCTIONS	19007	1/6/04	KL 1/04
B	ADD HOUSING/SPEED GEAR	25522	12/15/06	ECB 12/06

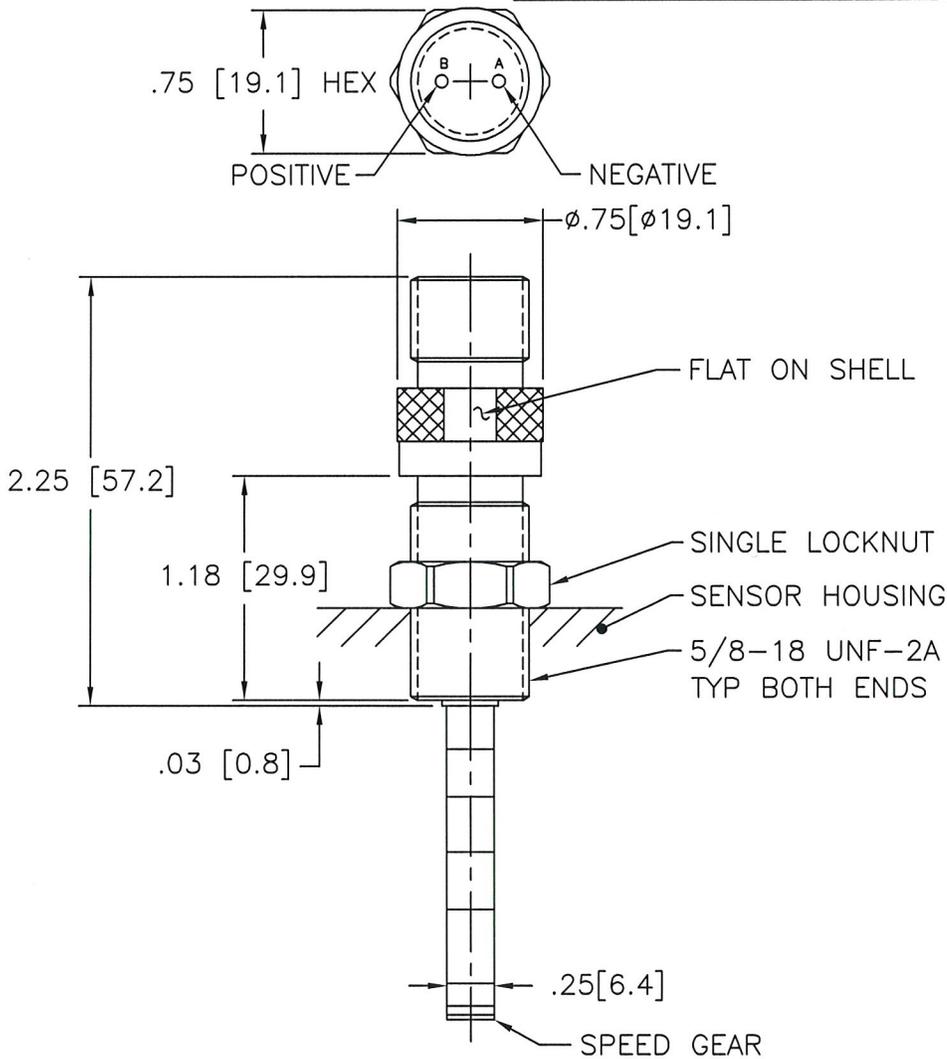

- 1.) REMOVE PROTECTIVE CAP AND O-RING FROM SENSOR HOUSING. DISCARD BOTH.
- 2.) SECURE TORQUE SENSOR SHAFT FROM ROTATING
- 3.) INSTALL A SINGLE LOCKNUT ONTO SPEED SENSOR
- 4.) SCREW SPEED SENSOR INTO TORQUE SENSOR HOUSING UNTIL IT BOTTOMS OUT ON THE SPEED GEAR.
- 5.) SLOWLY BACK THE SPEED SENSOR OFF THE GEAR UNTIL THE ALIGNMENT FLAT OR LINE IS PARALLEL WITH THE GEAR TRAVEL. THE PROXIMITY OF THE SENSOR TO THE GEAR SHOULD BE AS CLOSE AS POSSIBLE WITHOUT THE PARTS INTERFERING WITH EACH OTHER.
- 6.) FASTEN THE SPEED SENSOR INTO POSITION BY TIGHTENING THE SENSOR NUT. APPLY 5 ft-lbs [6.7 NEWTON-METERS] MAXIMUM TORQUE. BE CAUTIOUS NOT TO OVER TIGHTEN THE NUT.
- 7.) SLOWLY ROTATE THE TORQUE SENSOR SHAFT TO ENSURE THE SPEED SENSOR DOES NOT RUB ON THE GEAR.

UNLESS SPECIFIED TOLERANCES		DRAWN <i>mof</i> 12/15/06		MFG <i>P.R.-R.</i> 12-14-06		 3425 WALDEN AVE. DEPEW, NY 14043 (716) 684-0001 EMAIL: SALES@PCB.COM	
DIMENSIONS IN INCHES	DIMENSIONS IN MILLIMETERS [IN BRACKETS]	CHK'D <i>ECB</i> 12/16/06	ENGR <i>mjl</i> 12/18/06	SALES <i>run</i> 12/20/06	CODE IDENT. NO. 52681		
DECIMALS XX ±.01 XXX ±.005	DECIMALS X ±0.3 XX ±0.13	APP'D <i>amb</i> 12/18/06	TITLE INSTALLATION DRAWING MODEL A-30774A SPEED SENSOR		SCALE: FULL SHEET 1 OF 1		
ANGLES ±2 DEGREES	ANGLES ±2 DEGREES	FILLETS AND RADII .003 - .005		FILLETS AND RADII [0.07 - 0.13]			
DD011 REV. C 01/21/03							