

Model RH66102ANZ2

Pellet accelerometer

Installation and Operating Manual

For assistance with the operation of this product, contact PCB Piezotronics, Inc.

Toll-free: 800-959-4464 24-hour SensorLine: 716-684-0001 Fax: 716-684-3823 E-mail: imi@pcb.com Web: www.imi-sensors.com







Repair and Maintenance

PCB guarantees Total Customer Satisfaction through its "Lifetime Warranty Plus" on all Platinum Stock Products sold by PCB and through its limited warranties on all other PCB Stock, Standard and Special products. Due to the sophisticated nature of our sensors and associated instrumentation, field servicing and repair is not recommended and, if attempted, will void the factory warranty.

Beyond routine calibration and battery replacements where applicable, our products require no user maintenance. Clean electrical connectors, housings, and mounting surfaces with solutions and techniques that will not harm the material of construction. Observe caution when using liquids near devices that are not hermetically sealed. Such devices should only be wiped with a dampened cloth—never saturated or submerged.

In the event that equipment becomes damaged or ceases to operate, our Application Engineers are here to support your troubleshooting efforts 24 hours a day, 7 days a week. Call or email with model and serial number as well as a brief description of the problem.

Calibration

Routine calibration of sensors and associated instrumentation is necessary to maintain measurement accuracy. We recommend calibrating on an annual basis, after exposure to any extreme environmental influence, or prior to any critical test.

PCB Piezotronics is an ISO-9001 certified company whose calibration services are accredited by A2LA to ISO/IEC 17025, with full traceability to SI through N.I.S.T. In addition to our standard calibration services, we also offer specialized tests, including: sensitivity at elevated or cryogenic temperatures, phase response, extended high or low frequency response, extended range, leak testing, hydrostatic pressure testing, and others. For more information, contact your local PCB Piezotronics distributor, sales representative, or factory customer service representative.

Returning Equipment

If factory repair is required, our representatives will provide you with a Return Material Authorization (RMA) number, which we use to reference any information you have already provided and expedite the repair process. This number should be clearly marked on the outside of all returned package(s) and on any packing list(s) accompanying the shipment.

Contact Information

PCB Piezotronics, Inc. 3425 Walden Ave. Depew, NY14043 USA Toll-free: (800) 828-8840 24-hour SensorLine: (716) 684-0001 General inquiries: <u>info@pcb.com</u> Repair inquiries: <u>rma@pcb.com</u>

For a complete list of distributors, global offices and sales representatives, visit our website, <u>www.pcb.com</u>.

Safety Considerations

This product is intended for use by qualified personnel who recognize shock hazards and are familiar with the precautions required to avoid injury. While our equipment is designed with user safety in mind, the protection provided by the equipment may be impaired if equipment is used in a manner not specified by this manual.

Discontinue use and contact our 24-Hour Sensorline if:

- Assistance is needed to safely operate equipment
- Damage is visible or suspected
- Equipment fails or malfunctions

For complete equipment ratings, refer to the enclosed specification sheet for your product.

Definition of Terms and Symbols

The following symbols may be used in this manual:



DANGER

Indicates an immediate hazardous situation, which, if not avoided, may result in death or serious injury.



CAUTION

Refers to hazards that could damage the instrument.



NOTE

Indicates tips, recommendations and important information. The notes simplify processes and contain additional information on particular operating steps.

The following symbols may be found on the equipment described in this manual:



This symbol on the unit indicates that high voltage may be present. Use standard safety precautions to avoid personal contact with this voltage.



This symbol on the unit indicates that the user should refer to the operating instructions located in the manual.



This symbol indicates safety, earth ground.



PCB工业监视和测量设备 - 中国RoHS2公布表 PCB Industrial Monitoring and Measuring Equipment - China RoHS 2 Disclosure Table

部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴 联苯 (PBB)	多溴二苯 醚 (PBDE)			
住房	0	0	0	0	0	0			
PCB板	Х	0	0	0	0	0			
电气连接 器	0	0	0	0	0	0			
压电晶 体	х	0	0	0	0	0			
环氧	0	0	0	0	0	0			
铁氟龙	0	0	0	0	0	0			
电子	0	0	0	0	0	0			
厚膜基板	0	0	Х	0	0	0			
电线	0	0	0	0	0	0			
电缆	Х	0	0	0	0	0			
塑料	0	0	0	0	0	0			
焊接	Х	0	0	0	0	0			
铜合金 /黄 铜	Х	0	0	0	0	0			
本表格依据 SJ/T 1	L 1364 的 规定	E编制。							
0:表示该有害物	勿质在该部件	所有均同	気材料中	的含量均在 GB/T 26	572 规定的限量要求以	下。			
				材料中的含量超出(3目前由于允许的豁	6B/T 26572 规定的限量 免。	要求。			

CHINA ROHS COMPLIANCE

Component Name	Hazardous Substances								
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Chromium VI Compounds (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)			
Housing	0	0	0	0	0	0			
PCB Board	Х	0	0	0	0	0			
Electrical Connectors	0	0	0	0	0	0			
Piezoelectric Crystals	Х	0	0	0	0	0			
Ероху	0	0	0	0	0	0			
Teflon	0	0	0	0	0	0			
Electronics	0	0	0	0	0	0			
Thick Film Substrate	0	0	Х	0	0	0			
Wires	0	0	0	0	0	0			
Cables	Х	0	0	0	0	0			
Plastic	0	0	0	0	0	0			
Solder	Х	0	0	0	0	0			
Copper Alloy/Brass	Х	0	0	0	0	0			

This table is prepared in accordance with the provisions of SJ/T 11364.

O: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.

X: Indicates that said hazardous substance contained in at least one of the homogeneous materials for this part is above the limit requirement of GB/T 26572.

Lead is present due to allowed exemption in Annex III or Annex IV of the European RoHS Directive 2011/65/EU.

Model Number 66102A N Z 2	ICP [®] LOW-PROFILE TO-5 ACCELEROMETER							Revision: B ECN #: 49711
						TIONAL VERSI		CN #. 49711
erformance ensitivity(± 20 %)	ENGLISH	SI 1.02 mV/(m/s ²)	161111	Ontional version			ssories as listed for the	standard mode
leasurement Range	10 mV/g ± 500 g	$\pm 5,000 \text{ m/s}^2$	[6][1]	eptional version	except where noted b	below. More than o	ne option may be used	
requency Range(± 3 dB)	0.5 to 10 kHz	0.5 to 10 kHz	[3][7]					
esonant Frequency	> 25 kHz	> 25 kHz		HT - High temper temperatures	rature, extends norn	nal operation		
			[7]	Temperature Rar	nae	-65 to 250 °F	-54	to 121 °C
roadband Resolution	0.0018 g rms	0.017658 m/s ² rms	[4]	Temperature Ran Cable Type		-65 to 250 °F 031 PTFE Signal / Power	0	to 121 °C 31 PTFE al / Power
on-Linearity	≤1% ≤7%	≤ 1 % ≤ 7 %	[2]	Electrical Connec		Signal / Power Neg (-) Ground	Sign	al / Power (-) Ground
ansverse Sensitivity n vironmental	\$ 7 %	\$ 7 70		Lie ethear connec		neg() dioune	i iiig	() Ground
verload Limit(Shock)	5,000 g pk	49k m/s² pk		RH - RoHS Com	oliant			
emperature Range(Operating)	-65 to +185 °F	-54 to +85 ℃						
			F 41					
emperature Response	See Graph	See Graph	[4]					
lectrical								
ettling Time(within 1% of bias)	≤ 2 sec	≤ 2 sec						
scharge Time Constant	≥ 0.3 sec	≥ 0.3 sec						
citation Voltage	18 to 28 VDC	18 to 28 VDC						
nstant Current Excitation	2 to 20 mA	2 to 20 mA						
tput Impedance	< 100 Ohm	< 100 Ohm		1				
tput Bias Voltage	8 to 12 VDC	8 to 12 VDC		1				
ectral Noise(10 Hz)	19 µg/√Hz	186.4 (µm/sec ²)/√Hz	[4]	1				
ectral Noise(100 Hz)	8 µg/√Hz	78.5 (µm/sec ²)/√Hz	[4]	1				
ectral Noise(1 kHz)	5 μg/√Hz		[4]	1				
	5 µg/ v Hz	49.1 (µm/sec ²)/√Hz	[4]					
nysical								
e - Lip Diameter	0.36 in	9.1 mm						
e - Height	0.26 in	6.6 mm						
eight	0.08 oz	2.2 gm						
punting	Adhesive	Adhesive						
nsing Element	Ceramic	Ceramic						
ensing Geometry	Shear	Shear						
ousing Material	Stainless Steel	Stainless Steel						
ealing	Welded Hermetic	Welded Hermetic						
lectrical Connector	Integral Cable	Integral Cable						
lectrical Connection Position	Bottom	Bottom						
able Termination	Blunt cut	Blunt cut		NOTES:				
ectrical Connections(Red)	Signal / Power	Signal / Power			$ctor 1g = 9.81 m/s^2$.			
ectrical Connections(Black)	Neg (-) Ground	Neg (-) Ground			ast-squares, straigh			
able Length	1 ft	0.3 m			ency tolerance is acc	curate within ±10%	of the specified freque	ncy.
able Type	PVC	PVC		[4]Typical.				
<u> </u>					ration of Conformar			
					ut along Z-axis (in up		en pin mounted).	
				[7]Performance of	depends on mounting	g		
	The instant Area							
	🖓 Typical Sens	itivity Deviation vs Tempe	rature					
	Ĕ			SUPPLIED AC				
	j <u>≗</u> 5 ,					int amplitude respo	onse calibration at 6000) cpm (100
	2 0 J			Hz) for each axis (1)			
<u> </u>	ê °							
	× -5							
	15 J							
	(a) hypical sens			1				
	ີສູ -70 -40 -	-10 20 50 80 110	140 170 200	1				
	Ś							
		Temperature (°F)						
				Entered: LK	Engineer: YHK	Sales: MC	Approved: NJF	Spec Numbe
				Date: 07/03/2019	Date: 07/03/2019	Date: 07/03/201	9 Date: 07/03/2019	47361
						•	•	
						-	Phone: 800-	959-4464
					SENSUKS	•	Fax: 716-684	-3823
specifications are at room temperate	re unless otherwise specified				DENSUKS)		-3823
specifications are at room temperatu		nance specifications without	notice			12	Fax: 716-684	-3823
specifications are at room temperatu ne interest of constant product impro ® is a registered trademark of PCB P	ovement, we reserve the right to ch	nange specifications without	notice.	A PCB PIEZ 3425 Walden Aver	DENISURS COTRONICS DIV nue, Depew, NY 1404	43	Fax: 716-684	-3823

